


How to change settings

Detailed Setting Mode:

1 Press and hold both , **SET** & **FAN** buttons for more than 4 sec together.

2 Remote Controller display as below:



3 If group control, press the **UNIT** button and select the address. The fan at the indoor unit starts operating.

4 Select CODE No. with  /  buttons.

5 Change DATA with timer  /  buttons.

6 Press **SET** to confirm then press  to exit.

#1 Change the air sensor location to the wall controller.

Follow the instructions to the left.

At step 4 set the code to 32

Step 5 change the setting data to 0001

Once you've confirmed and exited settings mode you'll get the below symbol in the bottom right corner of the controller display.



32	Wired remote control sensor
0000	Not used - return air sensor is active
0001	Wall controller sensor is active